

VibroSaver Quick Start Guide

(Ver 1.2)

1 Get the VibroSaver app

Download and install the **VibroSaver** app from the **App Store** for your Apple device or the **Google Play Store** for your Android device.






Search
"VibroSaver"



VibroSaver

2 Create VibroSaver user account

Open VibroSaver app and register VibroSaver account. Choose **Email** or **Mobile** for your desired user account type and tap **Obtain verification code**.

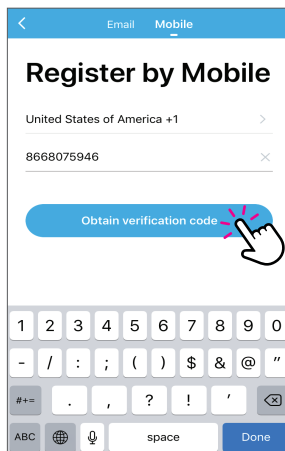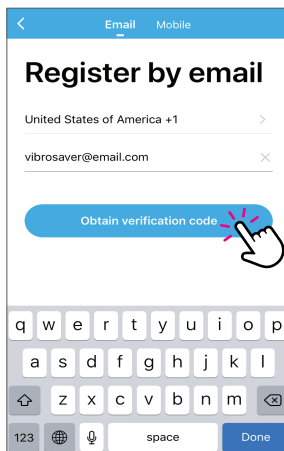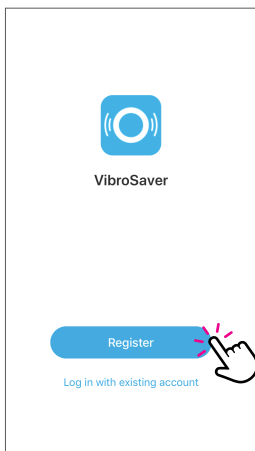

3 Connect and set up the VibroSaver

Connect your VibroSaver to Wi-Fi and set up to use with your VibroSaver account on the VibroSaver app.

- ⓘ *When VibroSaver is available to be registered to user account, it flashes **blue** LED. Otherwise, reset the device referring to the user manual.*



VibroSaver works on **2.4GHz Wi-Fi** network and your mobile device should be in the same network during the setup. *(Details on the back)*

Overview of VibroSaver



What is 2.4GHz Wi-Fi?

VibroSaver works on **2.4GHz Wi-Fi band** while most of home Wi-Fi supports dual bands (2.4GHz and 5GHz). Please make sure to connect to Wi-Fi network **without '5', '5G' or '5GHz' in its name**. If you continue to set up on 5GHz Wi-Fi on your mobile device, VibroSaver app will notify you to change your Wi-Fi network.



Tips

- Wi-Fi** Please make sure you have a good Wi-Fi reception where you use the VibroSaver. Your Wi-Fi network name and password are both case sensitive. They usually can be found on the label of your Wi-Fi router. For more information on Wi-Fi, go to vibrosaver.com/wifi.
- Alarm Setting** Please make sure to select the days to repeat the alarm for the next day. Alarm switches - on the device and in the app - should be turned on to ensure they work at the time you set.
- Voice Control** You can use your voice to snooze or stop alarm via **Amazon Alexa** or **Google Home/Assistant** enabled speakers or app. Please refer to the user manual to learn more about how to set up the voice services.

For further help, please visit our website vibrosaver.com/support or contact our customer service.